
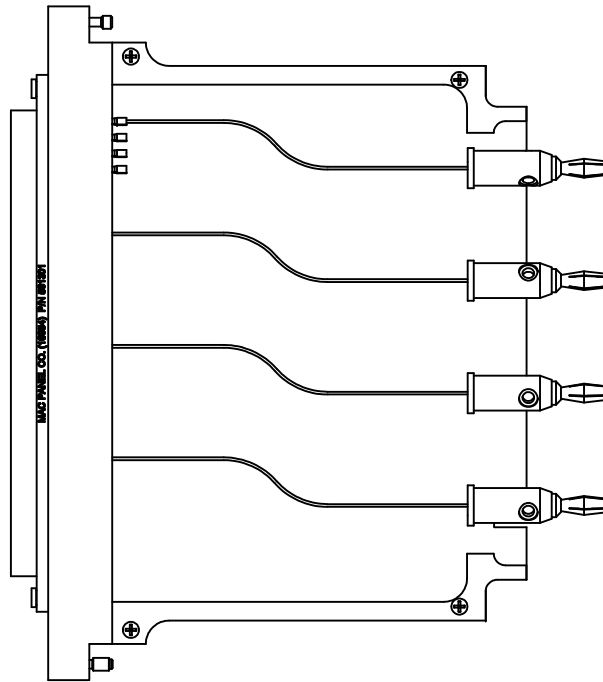


NOTES:

1. USE INSTRUCTION SHEET IN9110 FOR ATTACHING DAK TO PXI CARD.
2. MATING ITA MODULE P/N 561401.
3. BAG AND TAG AND SHIP P/N 5510941, 5510991, 440E9230.

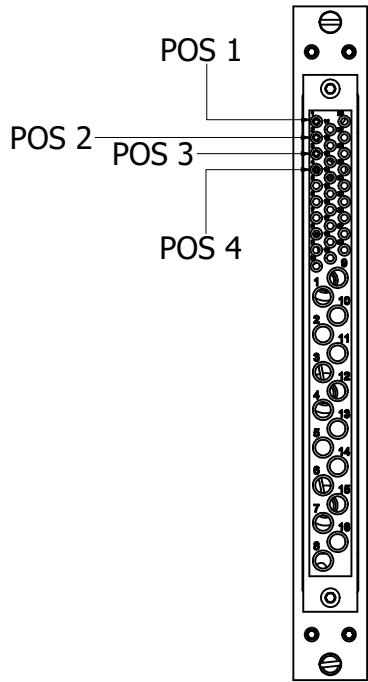

RED
HI 1


BLACK
LO 1

RED
HI 2

BLACK
LOW 2

BALLOON LEGEND	
PART NUMBER	QTY

TOLERANCES (UNLESS OTHERWISE SPECIFIED)	
<u>SHEET METAL</u>	<u>MACHINED</u>
ANGLES ± 1'	ANGLES ± 1'
.XX ± .03	.XX ± .01
.XXX ± .010	.XXX ± .005
	.XXXX ± .0005
REMOVE ALL BURRS AND BREAK SHARP EDGES.	



DRAWN BY	17/08/2017	MAC PANEL COMPANY - HIGH POINT, NC	
DBC		TITLE	
ENGINEERING		DAK ASSY, SCOUT, PXI-4060/4070	
OPERATIONS		SIZE	DWG NO
MANUFACTURING		C	561039-CU
ASSEMBLY		SCALE	SPN:
MATERIAL USED	-		SHEET 1 OF 2

A

NOTES:

1. USE INSTRUCTION SHEET IN9110 FOR ATTACHING DAK TO PXI CARD.
2. MATING ITA MODULE P/N 561401.
3. BAG AND TAG AND SHIP P/N 5510941, 5510991, 440E9230.


Pin out	
MAC 561301	Banana Plugs
S1	Red
S2	Black
S3	Red
S4	Black

BALLOON LEGEND	
PART NUMBER	QTY

TOLERANCES (UNLESS OTHERWISE SPECIFIED)

<u>SHEET METAL</u>	<u>MACHINED</u>
ANGLES ± 1'	ANGLES ± 1'
.XX ± .03	.XX ± .01
.XXX ± .010	.XXX ± .005
	.XXXX ± .0005

REMOVE ALL BURRS AND BREAK SHARP EDGES.

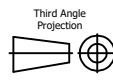

Third Angle Projection

DRAWN BY DBC ENGINEERING	17/08/2017	MAC PANEL COMPANY - HIGH POINT, NC	
OPERATIONS		TITLE	
MANUFACTURING		DAK ASSY, SCOUT, PXI-4060/4070	
ASSEMBLY		SIZE C	DWG NO 561039-CU
MATERIAL USED -		SCALE	SPN: SHEET 2 OF 2

A

D

C

B

8 7 6 5 4 3 2 1

8 7 6 5 4 3 2 1

D

C

B

A